


The Tactile Reader provides a kinesthetic screen free environment for programming. The Tactile Reader connects via Bluetooth with the Bluebot.

**Turn on the Blue-Bot.**

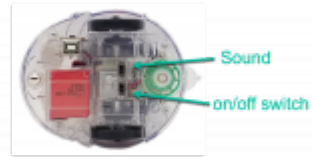

**Turn on the Tactile Reader.**



- Press the Bluetooth Connection button for 1 second**
- The Blue-Bot will turn blue and the blinking blue light on the tactile reader will turn solid.**
- You are now connected and ready to go!**

